

## P40

### Wireless Bridge + Range Extender

#### Firmware Upgrade Instructions

The P40 must be upgraded via Ethernet cable. We do recommend Factory Defaulting the P40 then performing the upgrade according to the following instructions.



**NOTE:** See the P40 QIG for instructions on how to Factory Default your device.

1. Download the new P40 firmware from <https://www.luxul.com/firmware-updates.aspx> and save to your computer.
2. Make sure your P40 is powered on.
3. Connect an Ethernet cable from your computer to the Ethernet port of the P40.
4. Open your web browser and go to <http://192.168.1.1>
5. At the login prompt type in your administrator username and password (default is admin/admin).
6. Press the “*Skip Wizard*” button.
7. Choose the “*Administrator*” menu option from the left navigation menu.
8. In the left navigation menu under “*Administrator*” select “*Firmware Update*”.
9. Select “*Choose File*”, navigate to the location of the P40 Firmware, select it and choose “*Open*”.
10. Select “*Update*” to begin the upgrade.
11. After the upgrade is completed you will need to login again as you did in step 5. To access the new User Interface after the upgrade go to: <http://192.168.1.1>